



## How to connect the fan cable in EX1M4 chassis

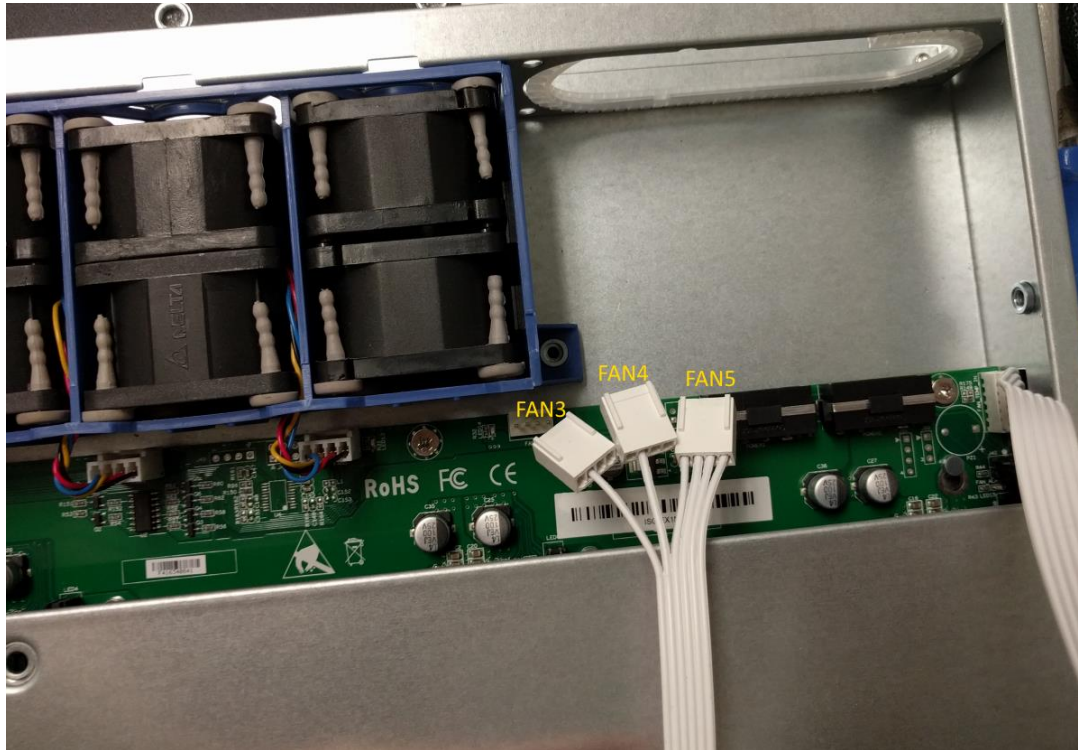

- 3 fan connectors for fan 3, 4, 5. Motherboard can read the fan speed/RPM of these 3 fans.
- Fan 5 connector must be connected to motherboard in order to control fan speed for all 5 fans. Fan 1 to 4 will just follow the speed/RPM of fan 5.

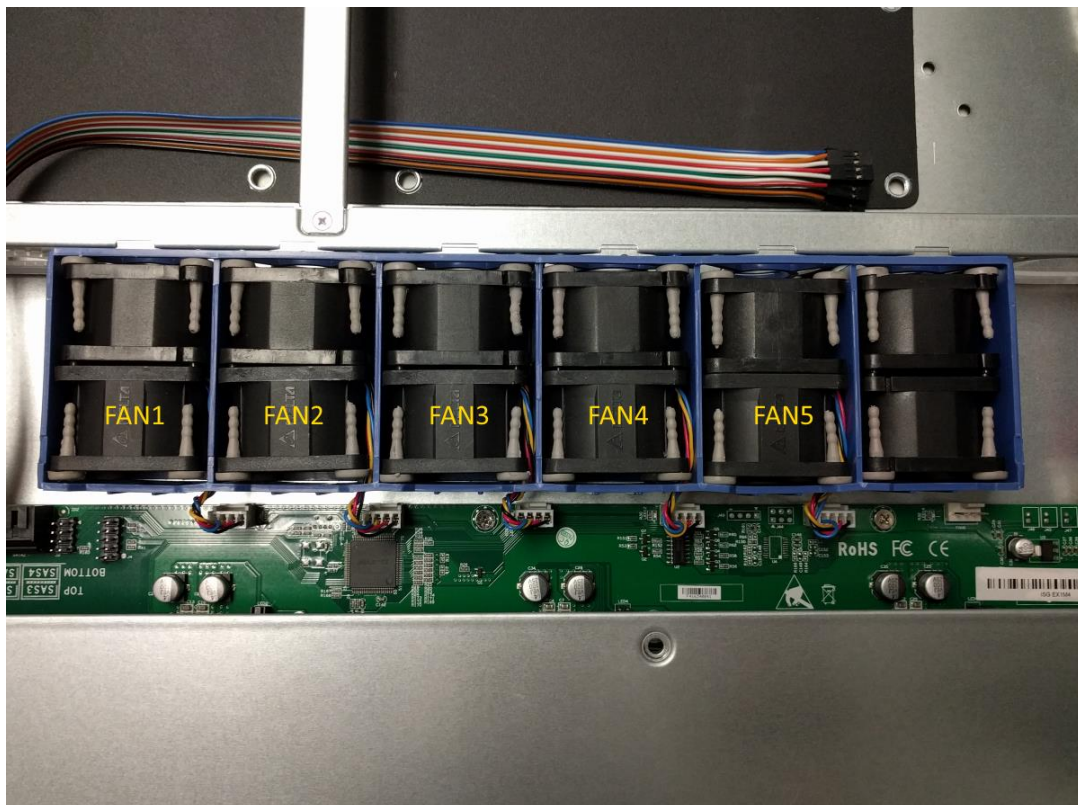

- Fan order