
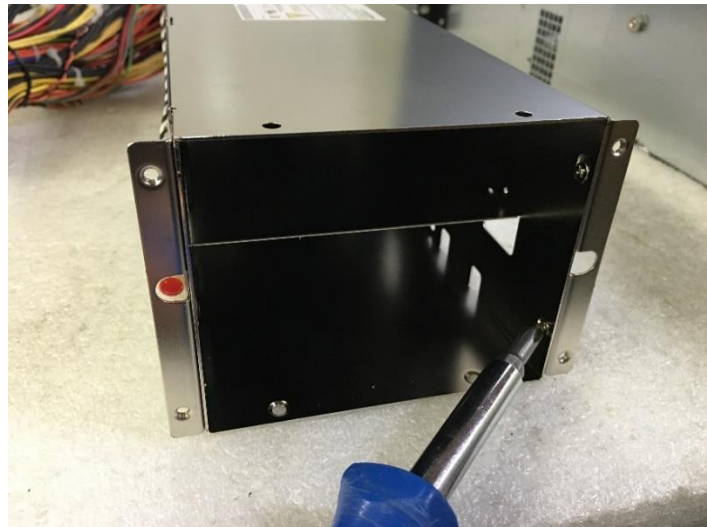


## IX-750S2UPD8G/IX-600S2UPD8/IX-800S2UPD8 with E2M12HD Chassis

### **Step 1:**


Take out power supply modules and remove both side brackets.

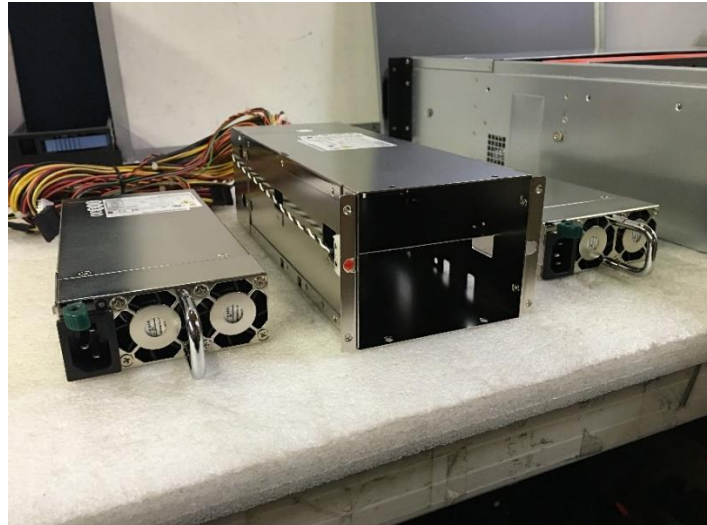

**Step 2:**

Remove reset button from the bracket by removing two rivets from the reset button using proper tools.


(a hammer and tip screwdriver may be needed)

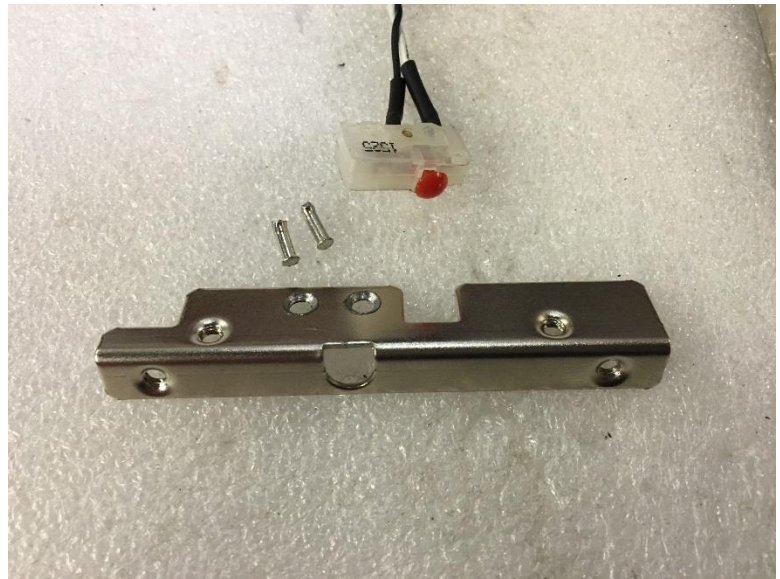


**Step 3:**


Secure reset button to **BRT-E2M12HD-IX-L** bracket with flat head screws.

(may need to make threads on reset button for screws to go in)

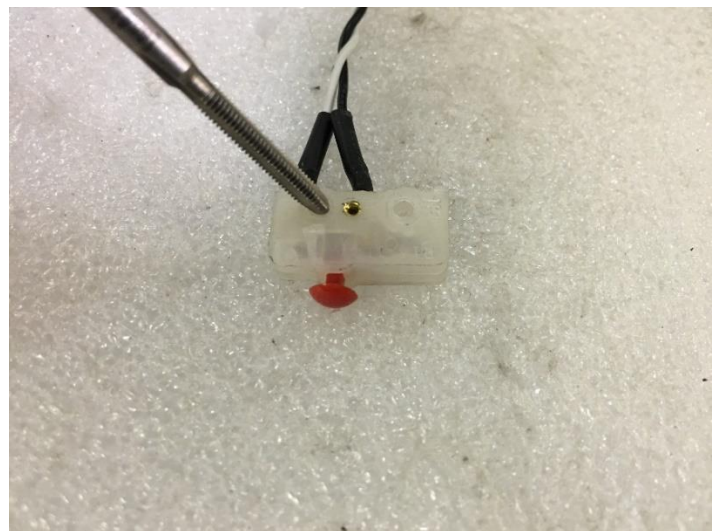


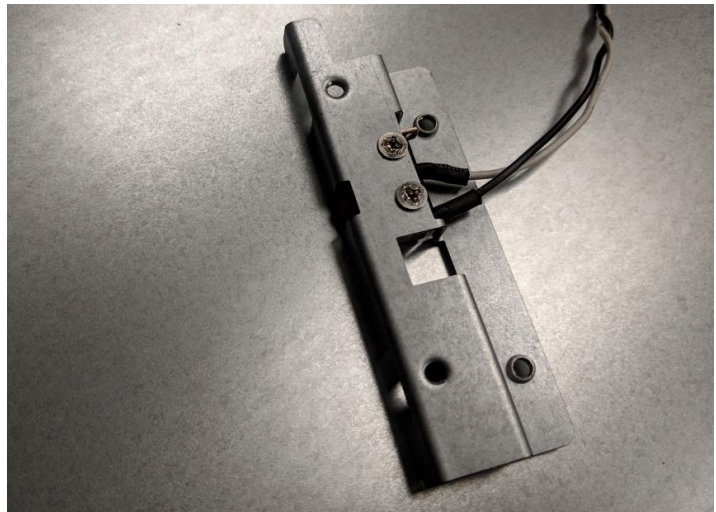

**Step 4:**  
Install BRT-E2M12HD-IX-L onto  
left side of the power supply.

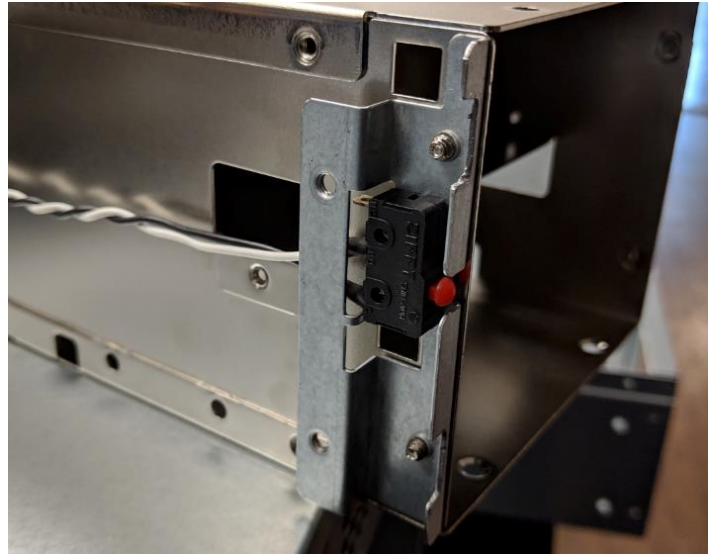

**Step 5:**  
Install BRT-E2M12HD-R onto  
right side of the power supply.  
**Make sure the direction is  
correct as the image shown.**

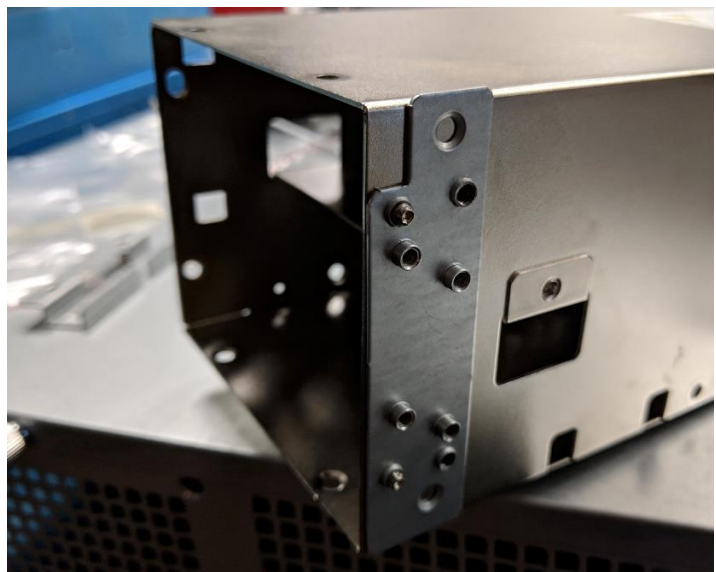

**Step 6:**

Secure power supply to chassis.

**Step 7:**

Finish

