


How to install wood top to WD cabinet

Step 1:

Make sure to install wood top to the top plate of cabinet first.


Flip the *top plate of cabinet and put it on top of wood board.

*top plate is the piece with four 5mm diameter holes and one 13mm diameter hole.

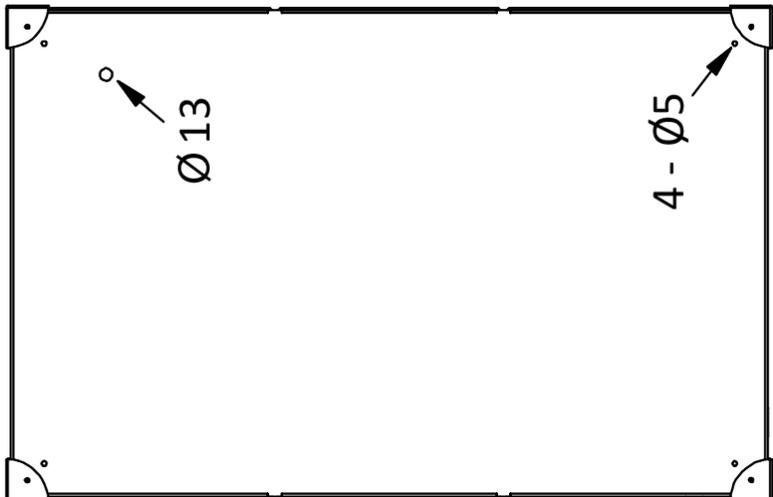

Step 2:

Make sure the 13mm hole align to the hole on wood top, then check the edges of top plate to ensure they are paralleled with wood top.

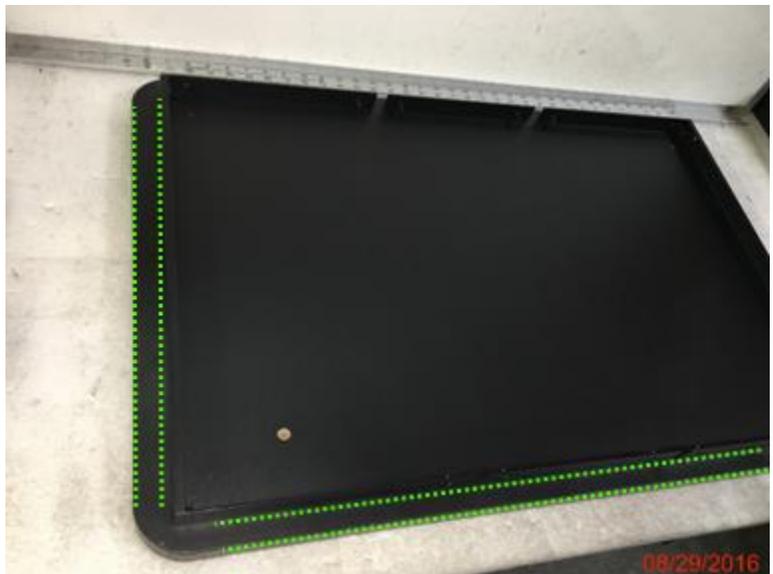

Step 3:

Use the self-tapping screws that come with the wood top to fasten wood top to the top plate directly via the four 5mm holes.

Please do not remove the wood top once mounted since the threaded holes will not secure the self-tapping screws anymore. If wood top will be mounted and unmounted frequently, strongly



suggest to use proper anchors and screws for this application.



Step 4:
Assemble the cabinet/rack.

Step 5:
Finish.

