
iStarUSA WO Series Installation




Put one of the bases on the floor



Align the posts with the screw holes. Make sure the numbers on the posts are facing out.

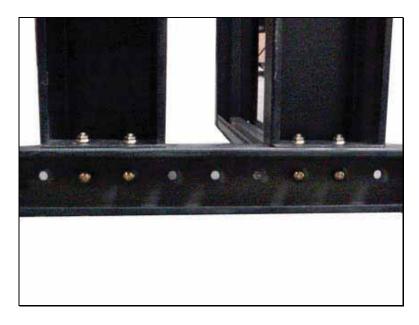

Secure the screws

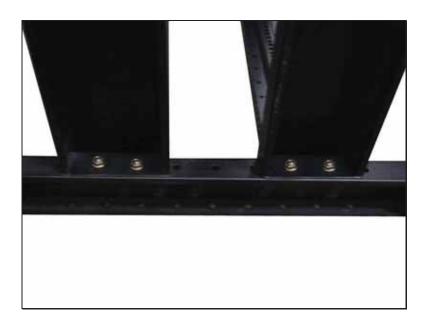

Secure the screws with nuts



Install the other base



Secure the screws



Finishing look