

How to adjust mounting rails:

STEP 1:

Unscrew four screws to loosen the vertical post (repeat for all four posts)

STEP 2:

Relocate the M5 cage nuts. Snap the cage nut from outside of the chassis to the horizontal post where you desire.



Repeat step 2 for all 8 corners.

STEP 4:


Flip and align the vertical post from step 1 behind the M5 cage nut then screws tight to secure the vertical post(repeat for all four posts)





WS Series

The newest innovation in audio visual data storage

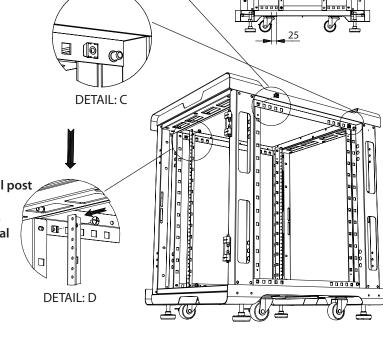



Tel: 1-888-989-1189

DETAIL: A

DETAIL: B

M5 cage nut

Fax: 1-626-301-0588

www.istarusa.com

MAX: 574

MIN: 250

Claytek - Powered by iStarUSA Group

Tel: 1-888-989-1189

Fax: 1-626-301-0588


www.istarusa.com






How to open side panel:

STEP 1:

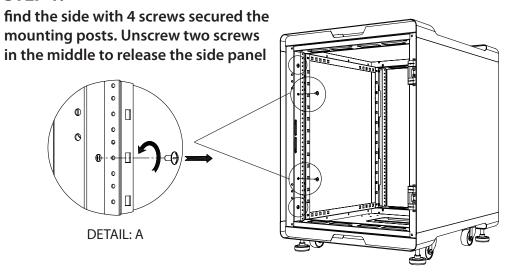


How to close side panel:

STEP 1:

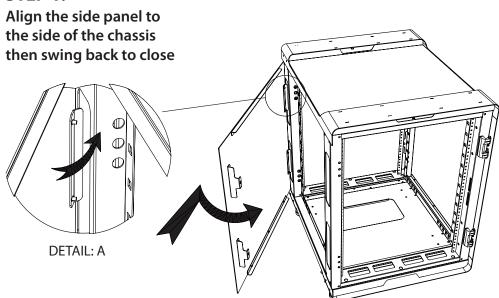



Swing out the side panel from the front and pull forward to completely remove it.

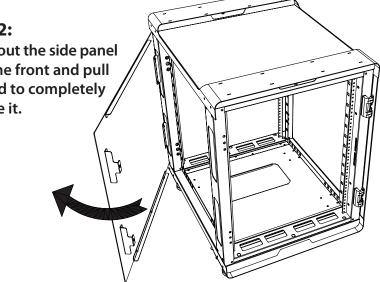



Screw two screws to secure the side panel in place

